

HOW TO PROGRAM YOUR REMOTE



PROGRAM YOUR UR4U-MDVR2 CABLE BOX REMOTE TO CONTROL YOUR TV

PROGRAMMING DEVICE CONTROL

Each of the additional device keys controls a particular type of device. For example, the TV key controls your TV.

1. Turn on the Component you want to program (TV, DVD or AUX).
2. Press the [COMPONENT] button (TV, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED will light for 30 seconds indicating the unit is ready to be programmed.
- *3. Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.
4. After you've entered the correct code number and the Component has turned Off, press the [POWER] button to turn the Component back On. Now it's time to test the VOLUME and MUTE buttons for the TV (or PLAY and STOP buttons for DVD) to make sure they all work. If any of the functions do not work as they should, repeat from STEP 3 using the next 3-digit code number listed for that brand.
5. Once you have found the correct 3-digit code, save it by pressing the same [COMPONENT] button one more time. The Component LED light will blink twice to confirm that the code was successfully stored.

***Note :** If the 3-digit code number you just entered is correct, the Component will turn off. If it did not turn off, continue entering code numbers listed for that brand until the component turns off.

ADMIRAL	072 251 333	CANDLE	197 002 003 363	DUKANE	011
AD NOTAM	672	CELEBRITY	001	DUMONT	073 363
ADVENT	247 388	CENTURION	197	DURABRAND	096
ADVENTURA	002	CETRONIC	043	DWIN	177 257
AFFINITY	680	CIELO	714	DYNASTY	043
ALERON	028	Ciil	732	DYNATECH	062
AKAI	197 248 404 475 387 615	CITIZEN	197 002 003 043 363 258	DYNEX	400
A MARK	112	CLARION	043	EIKI	187
AMERICA ACTION	043	CLASSIC	043	ELECTROBAND	001
AMPRO	167 073	CLP CLASSIC	333	ELECTROGRAPH	466
AMSTRAD	052	COBY	640 641 671 363	ELECTROHOME	024 076
ANAM	043 054 056 080 112	COLORTYME	197 363	ELEKTRA	072
AOC	197 112 363 616	CONCIERGE	073	ELEMENT	363 494 622 690
APEX	572	CONCERTO	363	EMERSON	028 048 043 197 050 051 076 096 151 363 514
APEX DIGITAL	006 724	CONTEC	043 050 051	ENVISION	197 363
AQUAVISION	573 574 686	Continu-us	161 746 747	EPSON	324 590
ASTAR	477	CORNEA	363	ESA	387
AUDIOVOX	076 454 388	CRAIG	043 054	Evervue	755
Avera	761	CROSLEY	164	FISHER	007 057
AVIELO	627 628	CROWN	043	FUJITSU	246 198 346
AVION	441	CURTIS MATHES	197 363 258	FUNAI	028 043 052
AXESS	711	CXC	043	FUTURETECH	043
BELCOR	363	DAEWOO	043 076 363	GATEWAY	242 268
BELL&HOWELL	072 333	DAYTRON	363	GE	144 165 073 197 008 009 034 056 130 363 333
BENQ	600	DELL	320 319 363 618	GEM	387
BRADFORD	043	DIGITAL PROJECTION	570		
BROCKWOOD	363	DIMENSIA	333		
CAIRN	201	DREAMVISION	235		

GIBRALTER	073 363	MAJESTIC	072 333	RADIO SHACK	019 043 363
GOLDSTAR	102 112 363	MARANTZ	197 164 272	RCA	333 165 065 144 197
GPX	674	MATSUI	164		024 056 161 363 588
GRUNPY	028 043	MATSUSHITA	080		713 751
HAIER	363 501 623 749	MAXENT	242	REALISTIC	007 019 043
HALL MARK	363	MEGATRON	197 011 363	REVOLUTION HD	466
HANNSPREE	381	MEMOREX	007 072 363	RUNCO	072 169 178 179 180
HARLEY DAVIDSON	028	MGA	197 024 028 363		181 073 395 416 697
HARVARD	043	MIDLAND	073 333		698
HELLO KITTY	076	MINUTZ	008	SAMPO	197 242 363
HIMITSU	043	MITSUBISHI	124 109 024 028 363	SAMSUNG	258 050 228 229 363
HISENSE	419 442 619 630 631		450 658		333 515 655
	363 752 749	MONT. WARD	072 333	SAMSUX	197
HITACHI	011 007 009 072 363	MTC	197 062 363 258	SANSEI	076
	587 613 670 749	MULTITECH	043	SANSUI	096 400 615 454 762
HP	421	NAD	138	SANYO	007 057 187 657 750
HUMAX	518	NIKO	527	SCEPTRE	276 699
ILO	472 400	NORCENT	390	SCOTCH	197 363
INFINITY	164	NUVISION	351 567	SCOTT	028 043 048 363 497
INFOCUS	333 547 548 470 595	OLEVIA	432 363 144 333	Sealoc	897
	726 733	ONKING	043	SEARS	138 030 007 028 057
INSIGNIA	350 400 052 164 403	onn.	898		165 363 333
	454 457 604 617	ONWA	043	SEIKI	690
INTEQ	073	OPTONICA	019 251	SELECO	200 205 011
JANEIL	002	OPTOMA	265 270	SEURA	704 797
JBL	164	ORION	096	SHARP	251 019 028 175 363
JCB	001	PANASONIC	080 034 056 164 208		684 692 735 765 766
JCPENNEY	024 197 008 009 030		552 524 607 664 801	SHERWOOD	349
	065 363 258 333	PEERLESS-AV	723 763	SHOGUN	363
JVC	038 034 001 210 240	PHILCO	197 003 164 024 056	SIGNATURE	072
	406 639 668 701		363	Silo	001
KAWASHO	001 197 363	PHILIPS	164 038 197 003 206	SIMPSON	003
KEC	043		431 363 333 161 594	Skyvue	648
KENWOOD	197 001		629 727 773	Skyworth	895
KLEGG	466	PILOT	363	SONY	001 608 646 185 651
KLOSS	002	PIONEER	234 197 374 393 272		702
KNOLL	659		363 660	SOUNDESIGN	028 003 043 363
KONKA	457	PLANAR	728 742 787 788	SOYO	528
KREISEN	530	POLAROID	388 328 353 354 355	SPECTRICON	112
KTV	043 197		356 494 387 505 506	SPECTRONIQ	499 500
KURAZAI	072		508	SQUAREVIEW	052
LG	363 102 112 569 648	PORTLAND	363	STARLITE	043
	741 598	PRISM	034	SSS	043 363
LODGENET	072	PROSCAN	144 165 167 333 722	SUNBRITE	633 634 635 386 605
LOEWE	164 738	PROTON	112 193 363 528		772
LOGIK	072	PROTRON	392 398 498 499 500	SUPRA	363
LUXMAN	363	PROVIEW	494	SUPRE MACY	002
LXI	007 138 052 164 251	PROX	572	SUPREME	001
	333	PULSAR	073 363	SVA	328
MAGNAVOX	164 197 003 226 390	PYLE HOME	661 662	SYLVANIA	197 003 052 164 514
	363 467 431 333 594	QUASAR	034 056		333 593

SYNTAX OLEVIA	432 363 144 333	TVS	096	WESTINGHOUSE	076 276 435 001 280
TANDY	251	UNIVERSAL	008 009		690 695
TATUNG	056 062	UPSTAR	708	YAMAHA	197 371 372 363
TCL	705 749	VENTURER	721	YORK	363
TECHNICS	034 080	VICTOR	038	YUPITERU	043
TECHNOL ACE	028	VIDIKRON	174 188 164	ZENITH	363 073 072
TECHWOOD	363	VIDTECH	363	ZONDA	112
TEKNIKA	002 003 024 028 043 072 363 258	VIEWSONIC	242 389 720		
TELEFUNKEN	615	VIKING	002		
TELERENT	072	VIORE	472 592 258		
TILEVISION	663	VISCO	494		
TMK	363	VITO	363		
TNCI	073	VIZIO	386 387 624 625 675		
TOSHIBA	138 030 007 062 325 258 703	WARDS	008 009 019 028 072 164 034 363		
		W Box Tech.	731		

Codes for additional devices such as DVD players can be found in the UR4U-MDVR2 Remote Control User Guide. A digital copy of the User Guide can be found at www.cascable.com/contact

SEARCHING FOR CODES

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

1. Turn on the component that you want to program (Cable Box, TV, VCR, or DVD).
2. Press the [COMPONENT] button (TV, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED will light for 30 seconds indicating the unit is ready to be programmed.
3. Point the remote toward the Component and press the [CH5] or [CH6] button one step at a time or keep it pressed. The remote will emit a series of ON/OFF commands. Release the [CH5] or [CH6] button as soon as the Component turns Off.
4. Test functions. (Same as for 3-Digit Code Programming Method - Section C). If any of the functions do not work as they should, repeat from STEP 3 using [CH5] or [CH6] buttons to find the correct code.
5. Once you have found the correct code, save it by pressing the same [COMPONENT] button one more time. The Component LED light will blink twice to confirm that the code was successfully stored.